


ART. NO. 820006

OPERATING INSTRUCTIONS:

INNER TIE ROD TOOL SET


1. THE TOOL SET ALLOWS A QUICK AND EASY REMOVAL AND REPLACEMENT OF THE INNER STEERING BALL JOINT WITHOUT THE NEED TO DISMANTLE THE STEERING RACK FROM THE BULKHEAD.

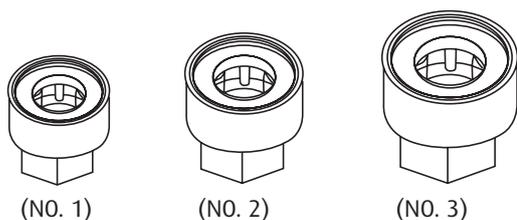


NO.1 DRIVE HEAD RANGE: Ø30-35MM.

NO.2 DRIVE HEAD RANGE: Ø35-40MM.

NO.3 DRIVE HEAD RANGE: Ø40-45MM.

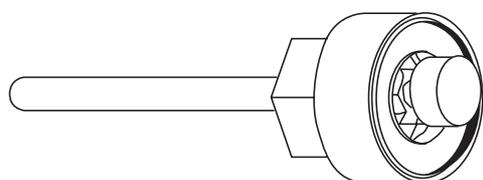

2. THE TOOL ALLOWS QUICK AND EASY REPLACEMENT OF THE INNER BALL-JOINT ON THE STEERING RACK. REMOVAL OF THE RACK FROM THE BULKHEAD IS NOT NECESSARY.

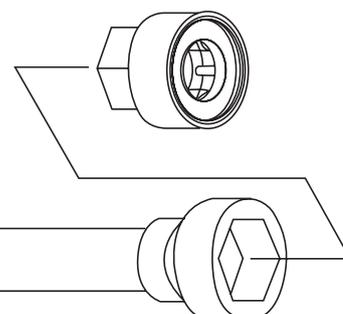

3. FIT THE APPROPRIATE LOCKING TOOL TO THE EXPOSED USING THE SPECIAL SOCKET UNDO THE BALL JOINT OF THE RACK STEERING RACK SIMULTANEOUS LOCKING THE RACK USING THE CHOSEN LOCKING TOOL. AFTER THE REMOVAL OF THE BALL JOINT IT IS NOW POSSIBLE TO REPLACE THE SEALING RING IN RACK HOUSING.

